




# **Operating Instructions (ÉN)**

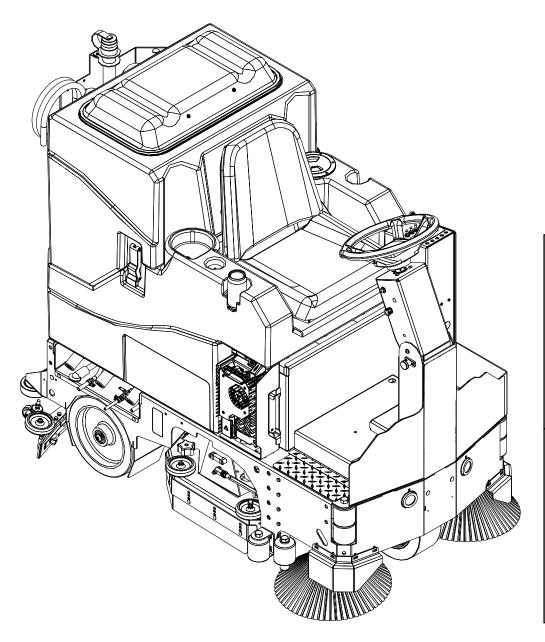



Read these Instructions before using the machine.



Read these Safety Messages before using the machine.

Scan With Phone for more Information



#### INTRODUCTION


This manual is furnished with each new machine. This manual will allow the Operator to get the best performance out of your RPS manufactured Scrubber-Drier, Sweeper, Burnisher, or Orbital Scrubber. Read this manual thoroughly before operating or servicing the machine.

This machine will provide excellent performance, but the best results will be obtained at the most minimum costs if:

- The machine is regularly maintained per the Authorized Local Distributor.
- The machine is operated with reasonable care and caution.
- The machine is maintained with manufacturer supplied parts.

### **LOCATE SERIAL NUMBER**

The serial number of your machine is located on the lower half of the steering column of the machine.

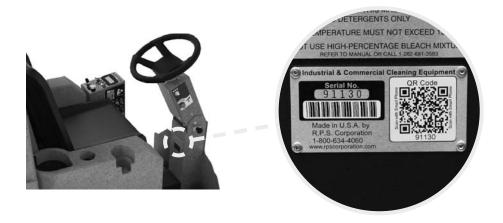

- 2 - FC-GTR-OP-EN

### **TABLE OF CONTENTS**



Introduction	2
Locate Serial Number	2
Table Of Contents	3
Safety Messages	4
Safety Labels	6
LCD Screen	7
Operation Controls	8
Operation Controls	9
Operation Controls	10
Service Cabinet	11
Spray Jet Controls (Optional)	12
Suds Controls (Optional)	13
ZERO3 Controls (Optional)	14
Manager Lock Outs (Optional)	15
Headlights & Work-lights (Optional).	16
Side Broom System (Optional)	17
RPM Mode Switch (Optional)	18
Battery Setup	19
Remove Squeegee	20
Adjust Squeegee	21

Remove From Charger22
Transportation - Forward23
Transportation - Reverse24
Fill Solution Tank25
Operation - Scrubbing26
Draining Recovery Tank27
Draining Solution Tank28
Flushing Recovery Tank29
Clean Drain Saver30
Clean Cylindrical Hopper31
Clean Vac Box System32
Remove Disk Brushes33
Remove Cylindrical Brushes 34
Parking Brake35
Charge Batteries 36
Battery Chargers 37
Common Wear Parts38
Round Disk Brushes: 38 Round Disk Pads: 38
Cylindrical Brushes:38
<b>P&amp;G Controller Common Error Codes40</b>



You will see four kinds of safety reminders in this manual:

# **ADANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

# **ACAUTION**

CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or damage to this machine or nearby objects. CAUTION also can be used to alert against unsafe practices.

### **A** WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### NOTICE

NOTICE indicates information considered important, but not hazard-related. This safety message may be related to property damage or warranty warnings.

Your safety, and that of others, is very important. Operating this machine safely is an important responsibility.

#### DO NOT OPERATE THIS MACHINE:

- Unless you are trained and authorized to do so by your RPS Authorized Local Distributor
- Unless you have read and understood this Operator's Manual
- On surfaces with greater than an 2% / 3.49° grade
- On Loading Docks

#### WHEN OPERATING THIS MACHINE:

- Remove loose objects from the floor that could be projected from the rotating Brushes
- Keep your hands and feet away from the rotating Brushes
- Do not operate this machine where flammable liquids, vapors, or dust are present
- Use caution when maneuvering
- Wear PPE

#### **BEFORE LEAVING THE MACHINE:**

- Drain "clean" Solution & "dirty" Recovery solution into APPROVED drains
- Park the machine on a level surface
- Turn the machine off & remove key

#### **BEFORE SERVICING THE MACHINE:**

- Disconnect the Batteries
- Wear PPE













# **ADANGER**

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

# **ADANGER**

Flammable materials can cause an explosion or fire. Do not use flammable materials in Tank or pick up.

### **A** WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/ or electrocution. Always disconnect Batteries before servicing this machine.

# **A** WARNING

When climbing or descending ramps, always drive machine forward. To avoid overturning the machine, Do not back down ramps. Do not drive across inclines. Do not turn while ascending or descending ramps. Overturning the machine can cause serious injury or death.

### **A WARNING**

Do not use water that exceeds 130°F / 54°C. If water is above said temperature, this will void the Tank Warranty.

# **AWARNING**

Do not park this machine on ramps or slopes. Always park this machine on a level, hard surface. Do not operate this machine outdoors or on uneven surfaces.

# **A** WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

### **AWARNING**

To avoid electrical shock, do not operate this machine over electrical floor outlets.

# **ACAUTION**

To avoid damage to this machine, use only cleaning solutions and replacement parts recommended by the manufacturer.

# **▲**CAUTION

Do not operate this machine if any parts have been damaged or removed.

### **A** WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

### **A** WARNING

Do not remove, paint over or destroy warning decals. If warning decals become damaged, call 1-262-681-3583 for free replacements.

# **A WARNING**

Dress safely. Do not wear a neck tie, scarf, or any loose or dangling clothing while operating this machine. Loose or dangling clothing or neck-wear can tangle in rotating parts, causing serious injury or death.

### **A** WARNING

Always turn off this machine before leaving it unattended. Do not allow untrained persons to operate this machine.

### **A** WARNING

NO RIDERS. Do not carry passengers on this machine. Do not use this machine as a stepladder or work platform.

### **A** WARNING

Understand the dynamic braking system before you operate the machine on ramps. Machine may coast.

# **A** WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

# **ACAUTION**

Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

# **ACAUTION**

To avoid damage to the electronic control components of this machine, Do not store this machine outdoors. Do not pressure wash this machine.

FC-GTR-OP-EN - 5 -





Read and obey all Safety Labels on your equipment. If you have questions about these labels, ask your supervisor.

These images indicate where on the Safety Labels are located. If ever the labels become illegible, worn off, or torn, promptly report it to your supervisor and replace it.



# A DANGER


#### **EXPLOSION RISK!**

EXPLOSIVE HYDROGEN GAS FORMS WHEN BATTERIES ARE CHARGING. AN OPEN FLAME OR SPARK CAN CAUSE THIS GAS TO EXPLODE.

ONLY CHARGE THE BATTERIES IN THIS MACHINE IN A WELL VENTILATED AREA.

USE ONLY DISTILLED WATER IN THE BATTERIES. USE ONLY THE OEM CHARGER PROVIDED WITH THE MACHINE. ALWAYS DISCONNECT THE BATTERY BEFORE SERVICING THE MACHINE.

REFER TO MANUAL OR CALL +011-262-681-3583

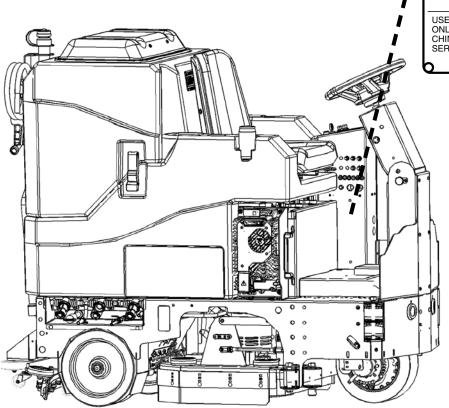



- 6 - FC-GTR-OP-EN




#### **SCREEN #1 (OPERATOR)**



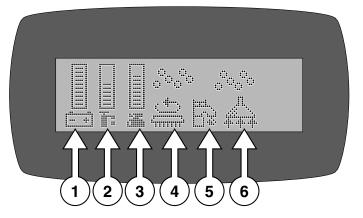

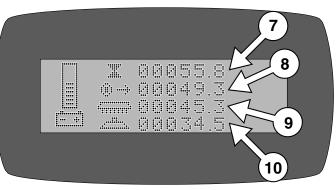

#### **SCREEN #3 (WITH ERROR CODE)**

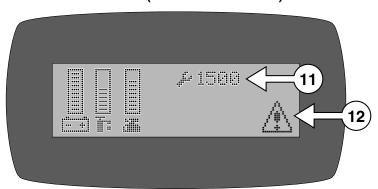


#### \*\* USE GREEN MENU SELECTION BUTTON ON CONTROL PANEL TO CHANGE SCREENS \*\*

- 1. BATTERY LEVEL INDICATOR Indicates the energy level remaining in the Batteries (Shown on all menu displays)
- 2. SOLUTION OUTPUT INDICATOR Indicates the gallons per minute (GPM) 0 1.0
- 3. SCRUBDECK DOWN PRESSURE INDICATOR Sets the down pressure on the Brushes / Pads
- 4. SCRUB MOTORS ON Indicates the Brush Motors are in operation
- 5. SOLUTION ON Indicates the solution flow is ON
- **6. VACUUM ON** Indicates the Vacuum is *ON*
- 7. KEY SWITCH HOUR METER Indicates total hours the machine has had keyswitch ON
- 8. TRANSPORT HOUR METER Indicates total hours the drive system has been in operation
- 9. SCRUB BRUSH HOUR METER Indicates total hours the brush motors have been in operation
- 10. VACUUM HOUR METER Indicates total hours the vacuum motor has been used
- 11. DIAGNOSTIC CODE Displays diagnostic code which helps troubleshoot issues
- 12. ERROR WARNING SYMBOL Indicates when there has been a diagnostic code error

FC-GTR-OP-EN - 7 -

 




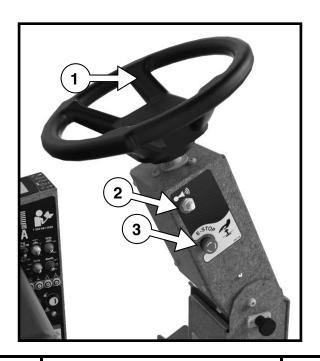











- 8 -FC-GTR-OP-EN

# **OPERATION CONTROLS**





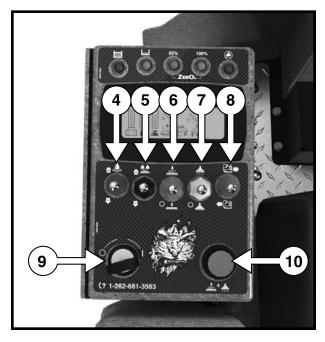


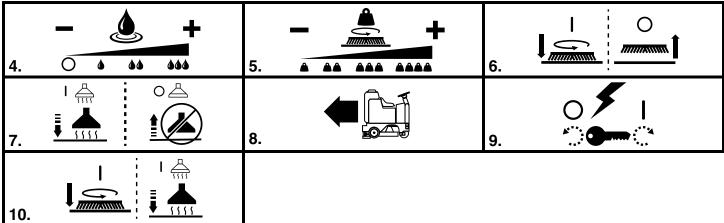


FC-GTR-OP-EN - 9 -





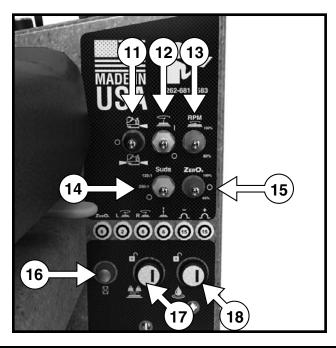


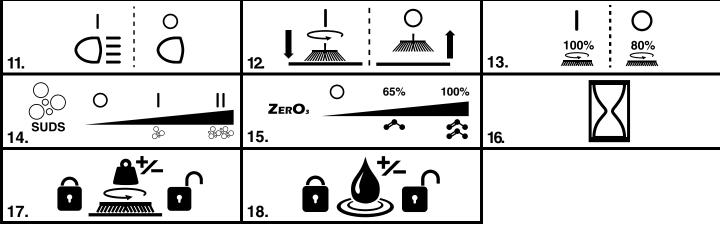

- 10 - FC-GTR-OP-EN

### **SERVICE CABINET**



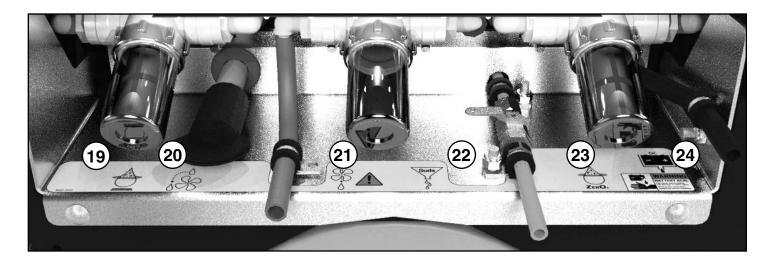

#### **19. SOLUTION FILTER:**

Standard Solution Feed Filter for scrubdeck.



#### 20. VAC BOX UNLOADER: ....

Unloader valve for the Yellow Vac Box. Water present in the Yellow Vac Box will drain when vacuum is off.



# 21. VACUUM DISCHARGE:

Water passed through the Vacuum Motor will be visible in the reservoir and excess will flow from the blue hose. Indicates service required.



#### 22. SUDS DRAIN:

Drain detergent from Suds reservoir.



#### 23. ZERO3 FILTER:

Optional ZerO3 (O3+) Ozone System Solution Filter.



#### 24. BATTERY DRAIN:


Drain any fluid from Poly Battery Box.

 



FC-GTR-OP-EN - 11 -





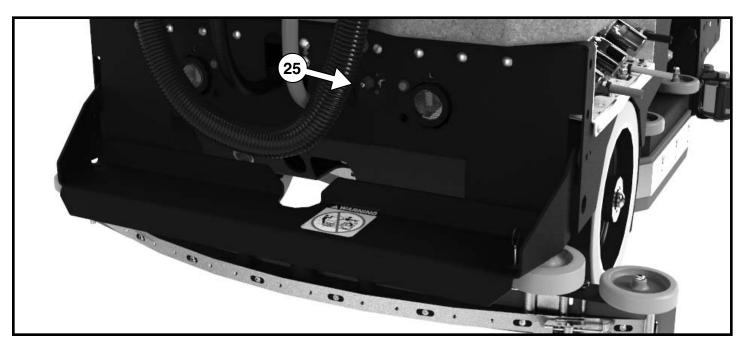




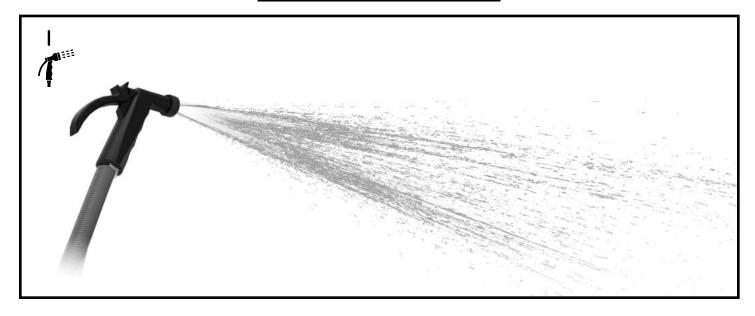


- 12 - FC-GTR-OP-EN


# **SUDS CONTROLS (OPTIONAL)**



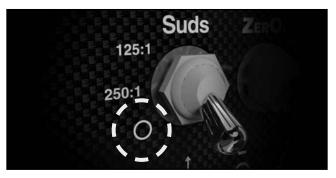


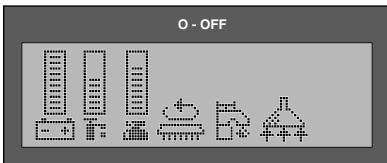



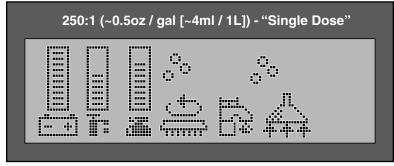



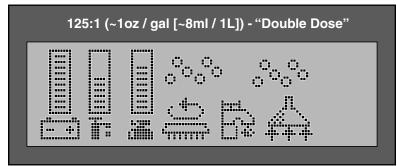

FC-GTR-OP-EN - 13 -














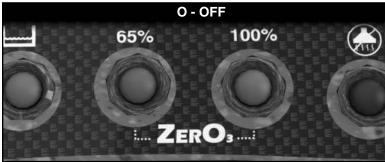




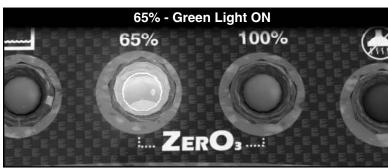

Turn regular solution OFF, when using ZerO3 Aqueous Ozone.

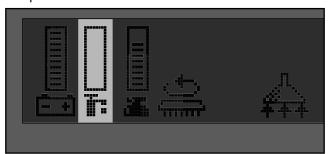

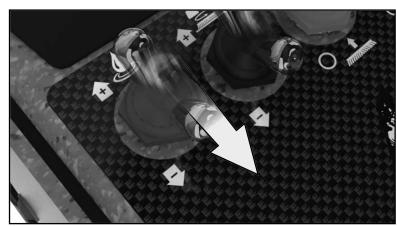

- 14 - FC-GTR-OP-EN


# **MANAGER LOCK OUTS (OPTIONAL)**






#### **CONTROLLING MANAGER LOCK OUTS:**


When the key is in the LOCKED position, keys can be removed and Solution OR Down-pressure cannot be adjusted.

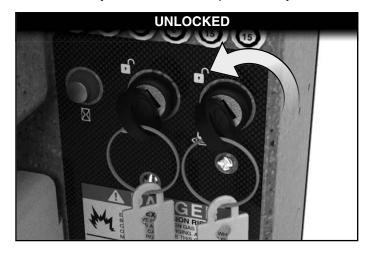


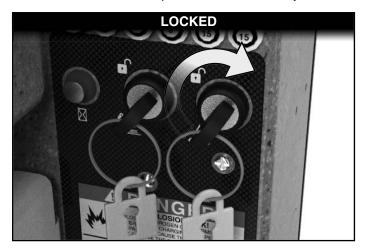






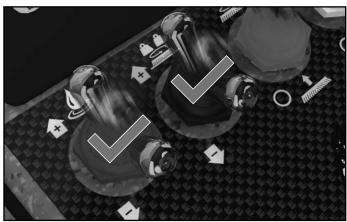

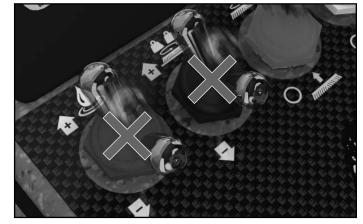


FC-GTR-OP-EN - 15 -

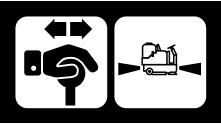


# **HEADLIGHTS & WORK-LIGHTS (OPTIONAL)**




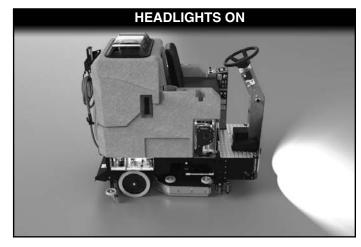



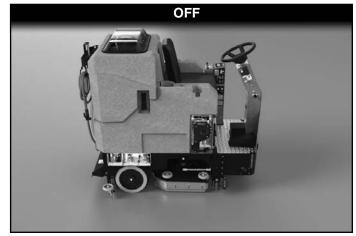



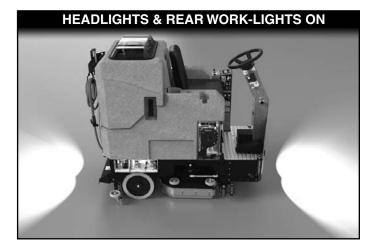



# SIDE BROOM SYSTEM (OPTIONAL)










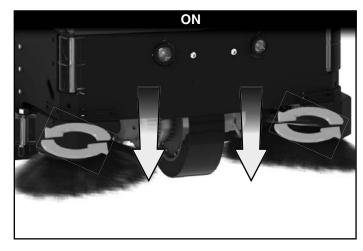


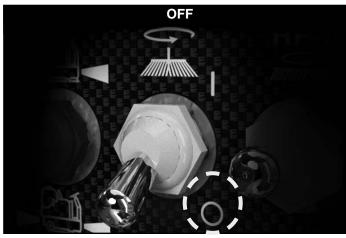  

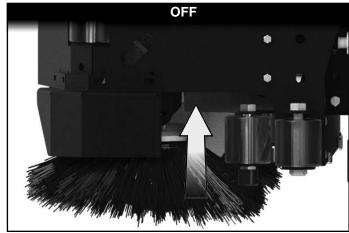


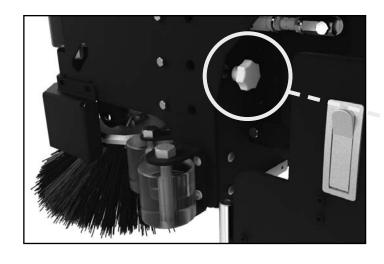







FC-GTR-OP-EN - 17 -

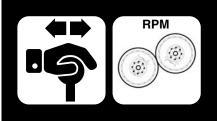


# **RPM MODE SWITCH (OPTIONAL)**



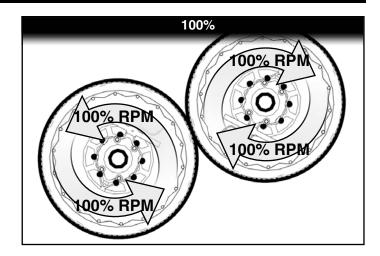

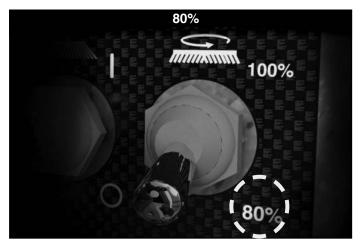

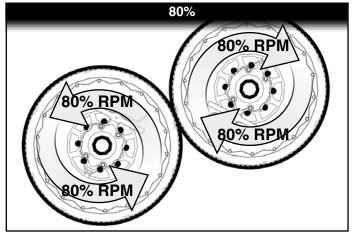


- 18 - FC-GTR-OP-EN


### **BATTERY SETUP**









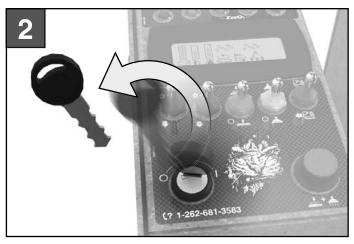

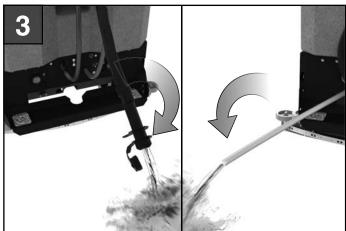

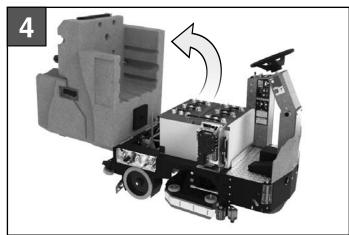

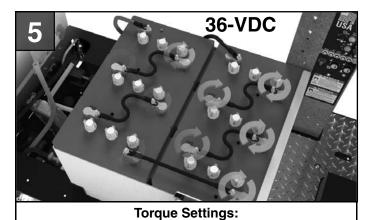

# **A** WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.













# \_\_\_\_

8-12 ft/lbs (10.8 - 16.3 joules)


Batteries are a possible environmental hazard. Consult your Battery supplier for safe disposal methods.

# **AWARNING**


The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.


FC-GTR-OP-EN - 19 -




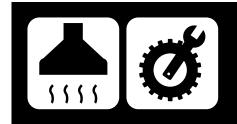



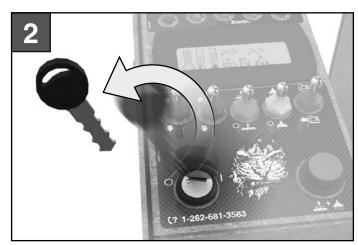


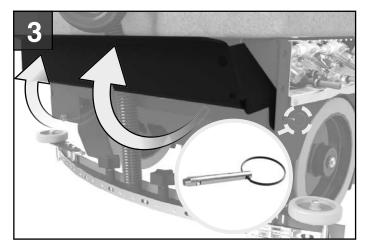

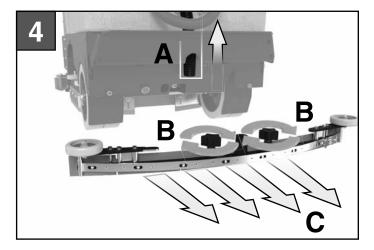



# **ADJUST SQUEEGEE**



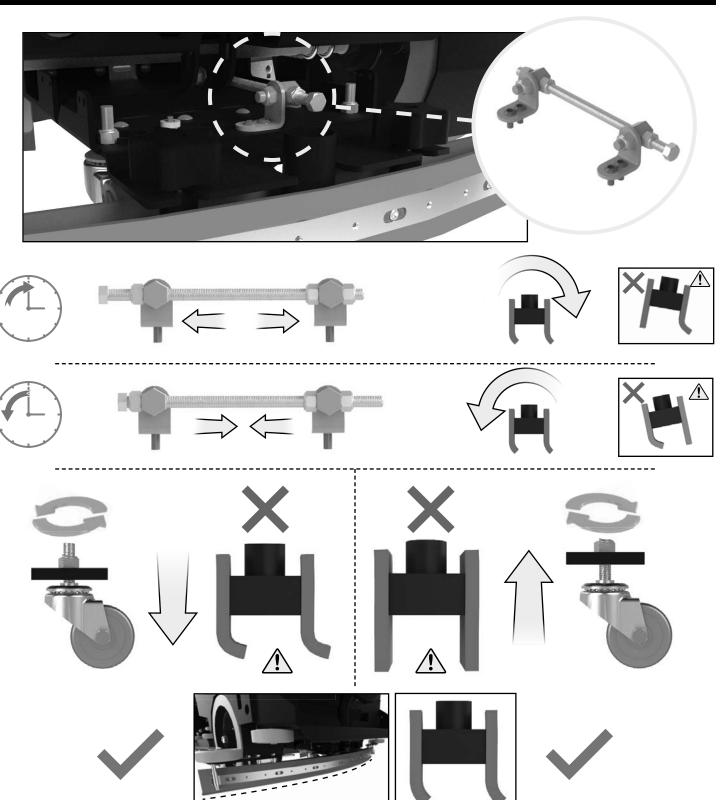

FC-GTR-OP-EN

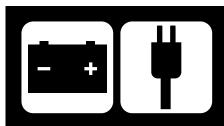

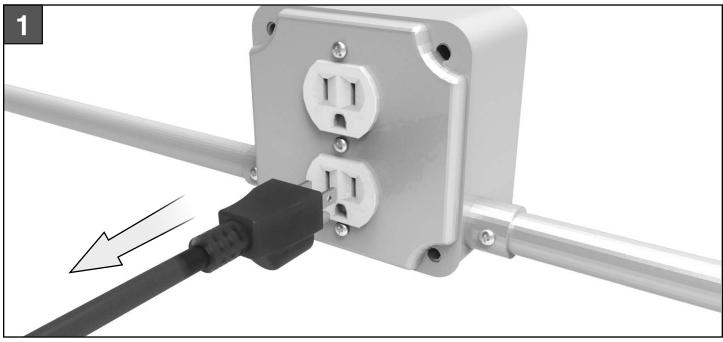




Please refer to OEM Charger Operating Instructions for more information.





- 22 - FC-GTR-OP-EN

### **TRANSPORTATION - FORWARD**




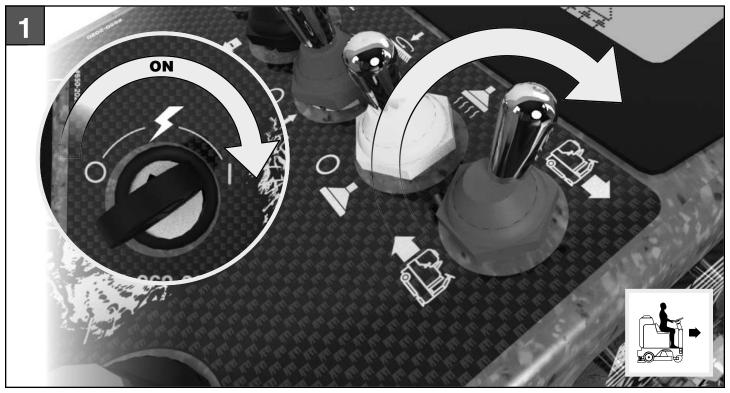

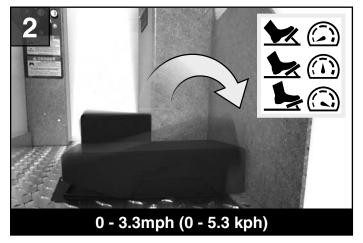

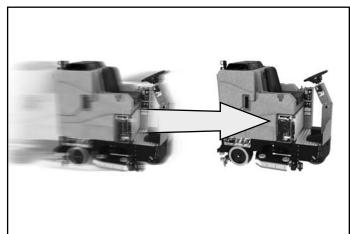





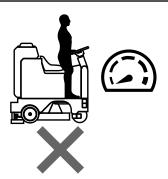


### **TRANSPORTATION - REVERSE**




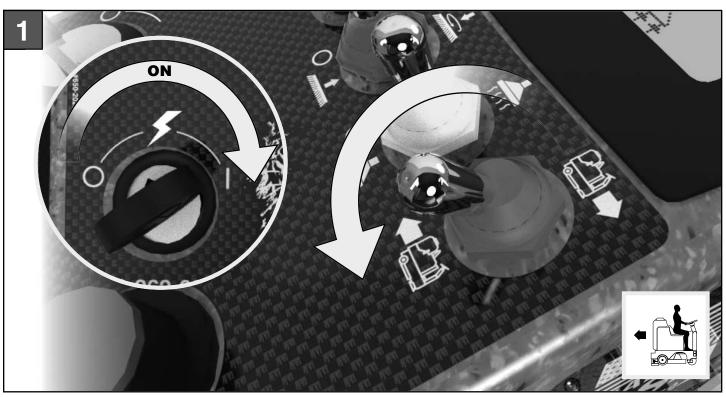

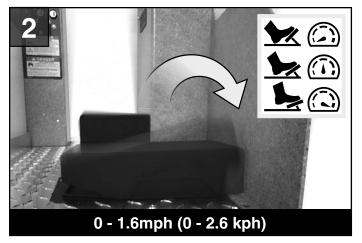

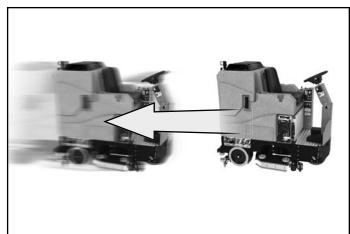




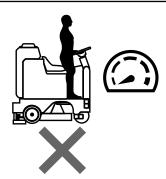

# **FILL SOLUTION TANK**







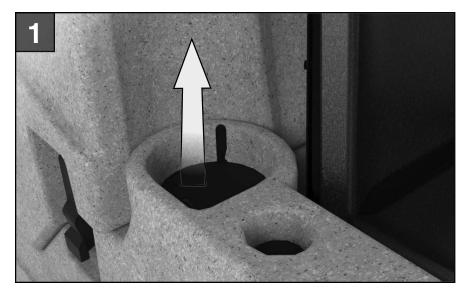


 





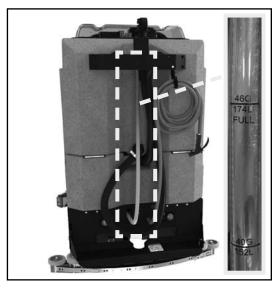


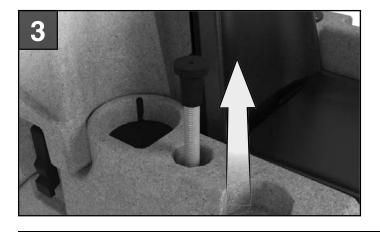


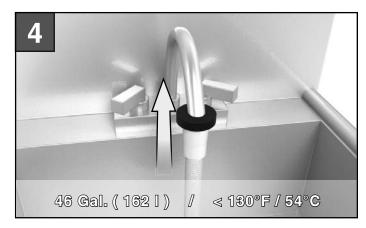




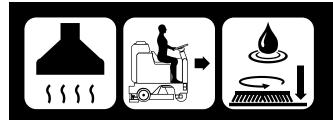

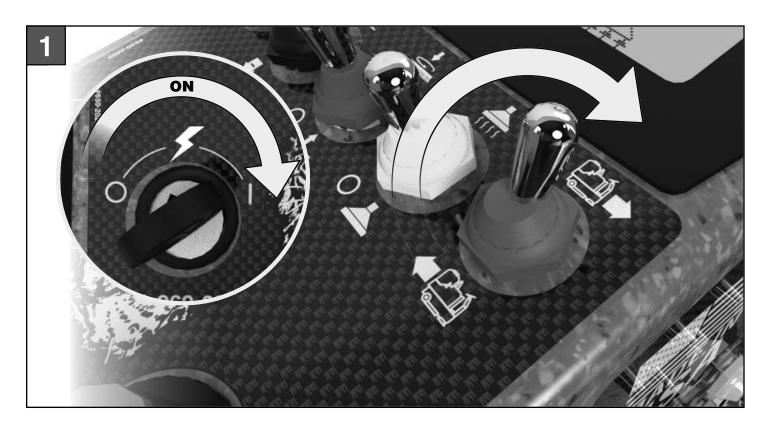

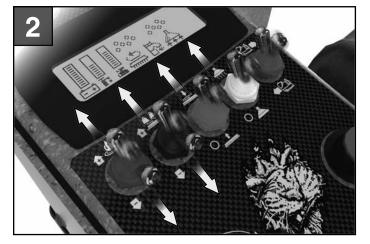


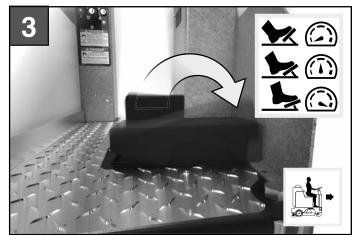



# **DRAINING RECOVERY TANK**





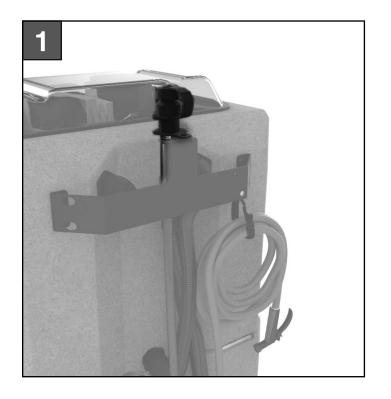

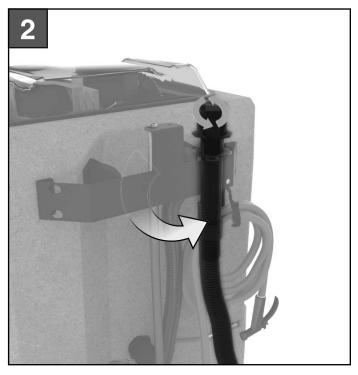


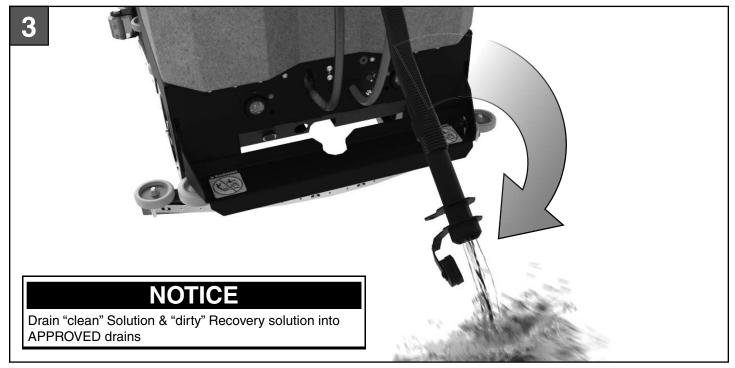



FC-GTR-OP-EN - 27 -

### **DRAINING SOLUTION TANK**



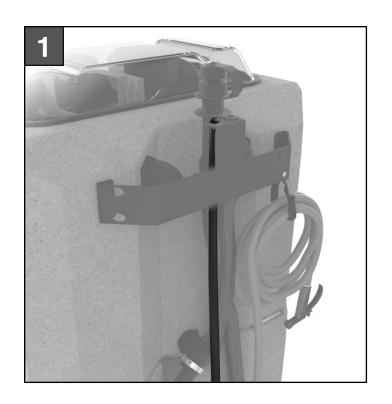

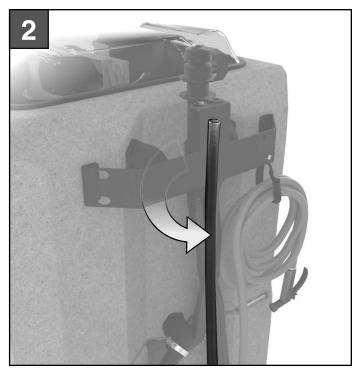

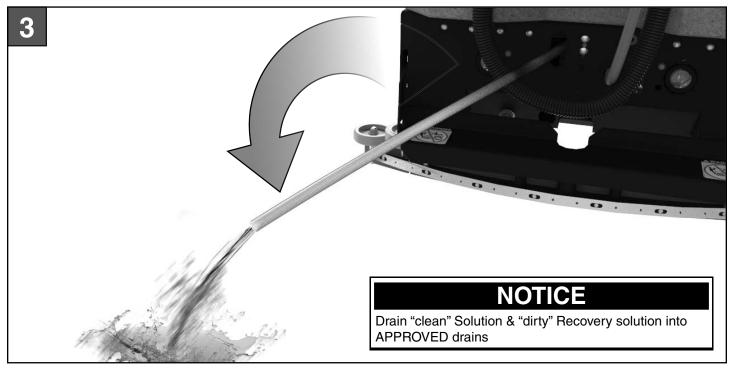


- 28 - FC-GTR-OP-EN

# **FLUSHING RECOVERY TANK**






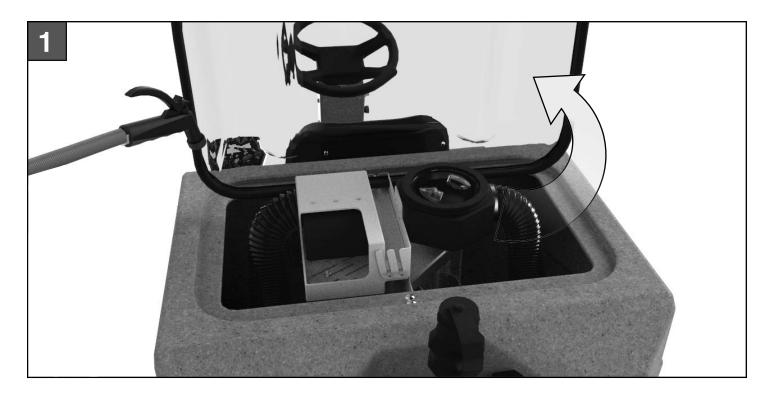









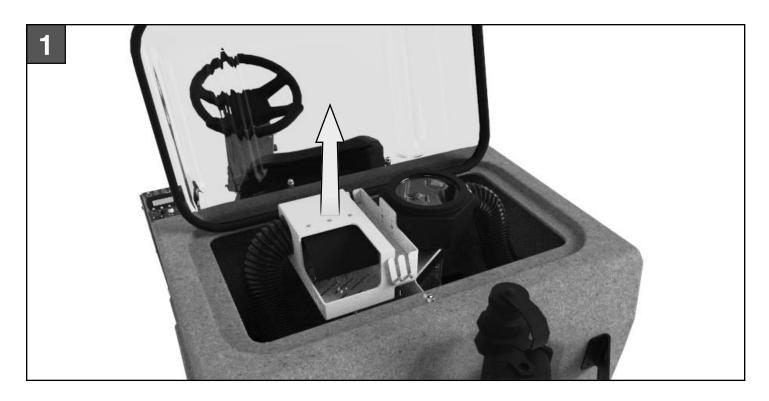

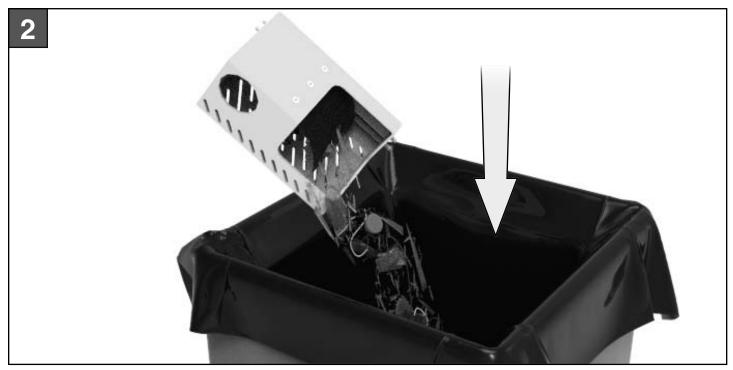



# **CLEAN CYLINDRICAL HOPPER**



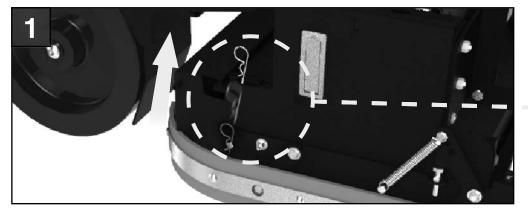



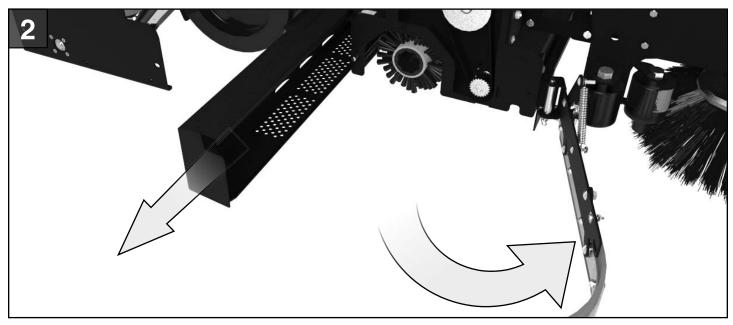

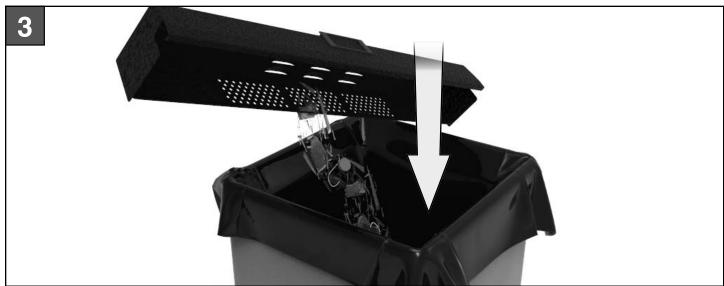



FC-GTR-OP-EN


# **CLEAN VAC BOX SYSTEM**







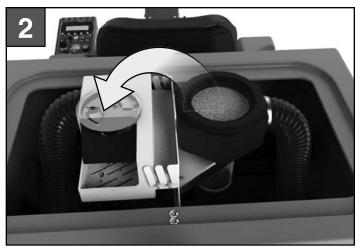

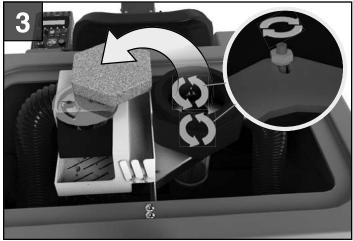

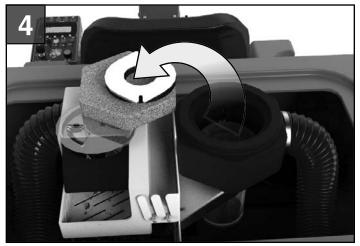


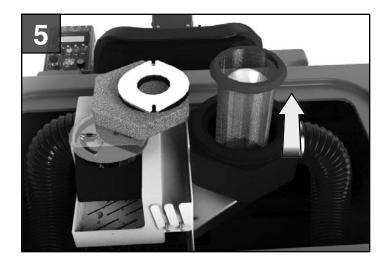


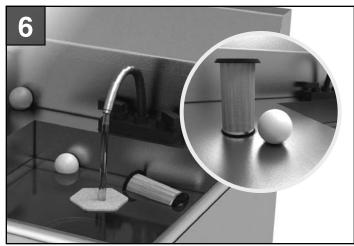

# **REMOVE DISK BRUSHES**



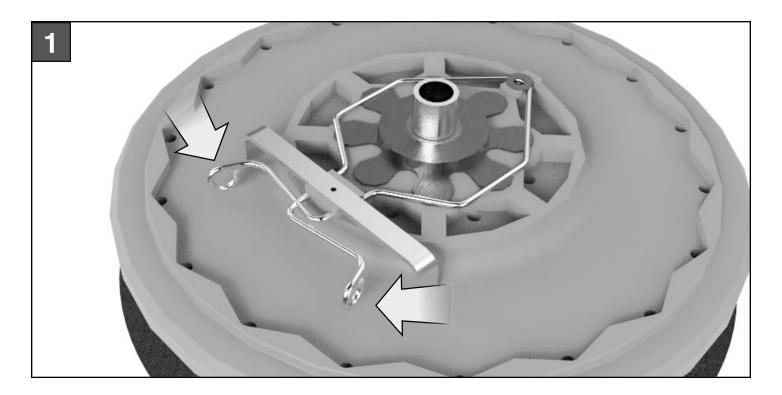


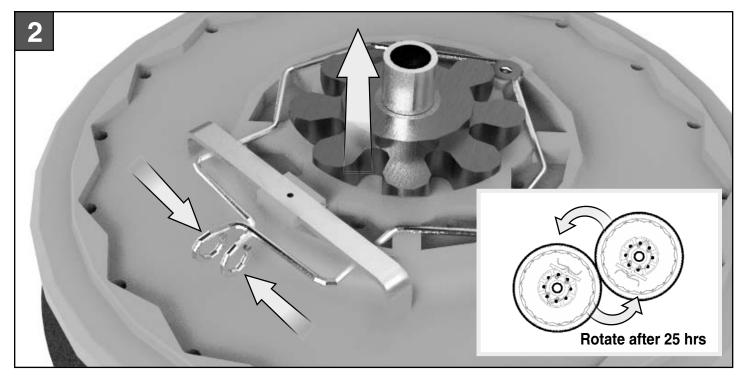


Replace brush when fibers reach 1/4 inch in length

 
FC-GTR-OP-EN - 33 -







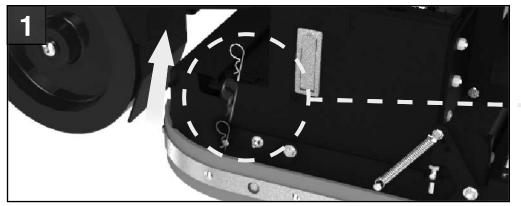



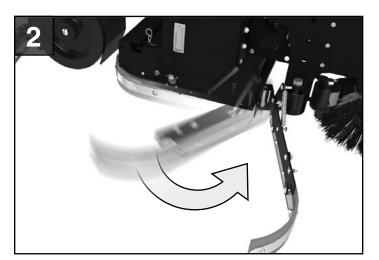

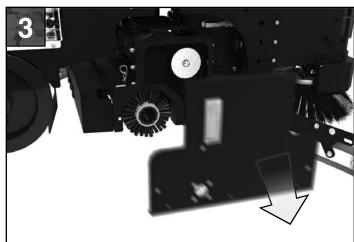

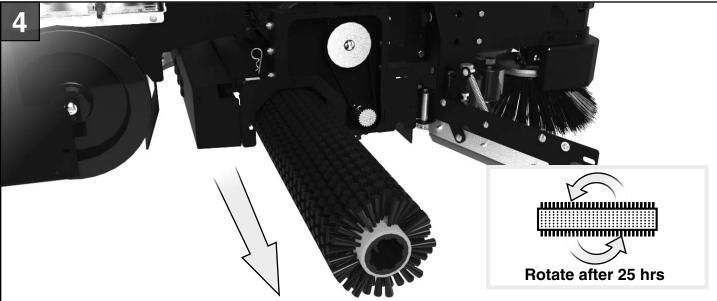

Replace brush when fibers reach 1/4 inch in length

- 34 - FC-GTR-OP-EN

### **PARKING BRAKE**





# **A WARNING**


Do not park this machine on ramps or slopes. Always park this machine on a level, hard surface. Do not operate this machine outdoors or on uneven surfaces.


# **A** WARNING

Understand the dynamic braking system before you operate the machine on ramps. Machine may coast.

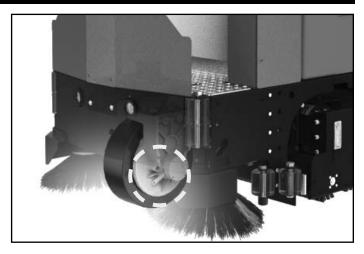


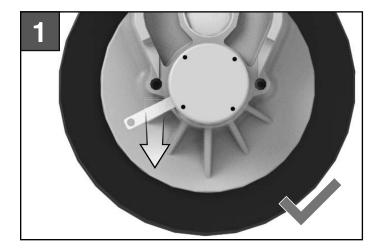


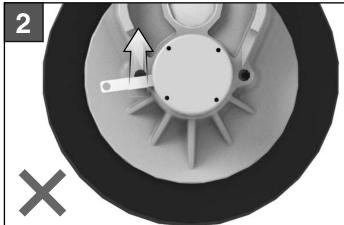

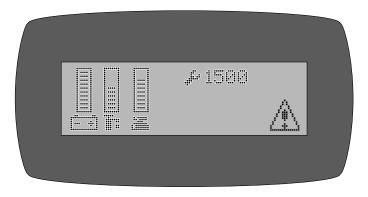


FC-GTR-OP-EN - 35 -

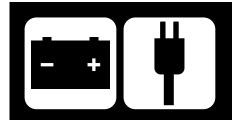

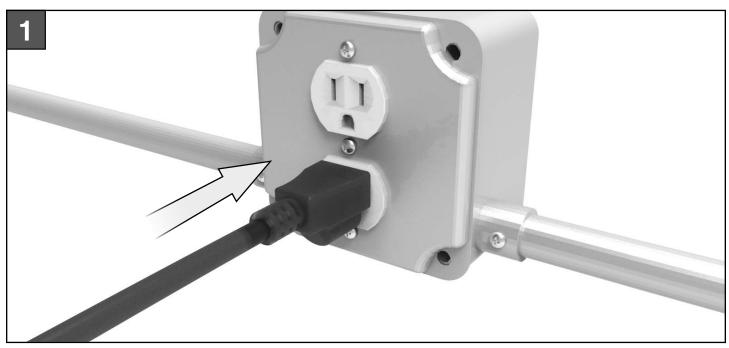



Please refer to OEM Charger Operating Instructions for more information.

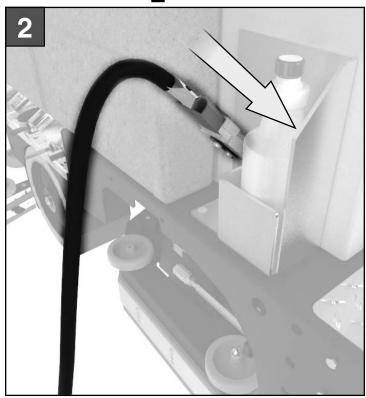


# **A** DANGER


Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

- 36 - FC-GTR-OP-EN
 
### **BATTERY CHARGERS**



### **Console / WET / Domestic Chargers:**

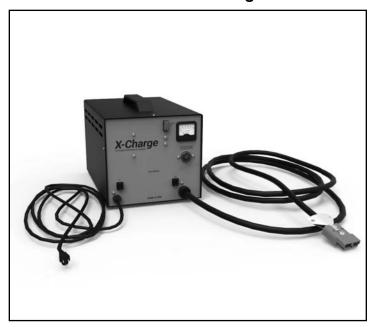



AC Power IN: 120VAC / 60Hz

**DC Power OUT:** 36VDC / 25A (ST) - 36A (HD)

Please refer to OEM Charger Operating Instructions for more information.



### **Onboard / AGM / International Chargers:**





**AC Power:** 80-270VAC / 50-60Hz **DC Power OUT:** 36VDC / 33A

Please refer to OEM Charger Operating Instructions for more information.



FC-GTR-OP-EN - 37 -

### **COMMON WEAR PARTS**

#### **ROUND DISK BRUSHES:**

# **NOTICE**

The ## in Disk Column Denotes Desk Pad Size: 15" or 17"

BRUSHES	DISK	LEVEL
Super Grit	##-382SS	Very High
Tough Grit	##-382S	High
Midi Grit	##-382C	Medium
Light Grit	##-382PS	Moderate
Poly	##-382P	Light
Nylon	##-382N	Light
Tampico	##-382T	Light
Pad Driver	##-382D	
Diamond Driver	##-382DD	

#### **ROUND DISK PADS:**

# **NOTICE**

The ## in Disk Column Denotes Desk Pad Size: 15" or 17"

DISK PADS	DISK	LEVEL	COLOR
Super Black	##-422BB	Very High	Black
Black	##-422B	High	Black
Brown	##-422BR	High	Brown
Green	##-422G	Medium	Green
Blue	##-422BL	Moderate	Blue
Red	##-422R	Moderate	Red
White	##-422W	Light	White

#### **CYLINDRICAL BRUSHES:**

BRUSHES	MODEL 29" CYLINDRICAL	MODEL 33" CYLINDRICAL	LEVEL
Tough Grit	276-697S	316-697S	High
Midi Grit	276-697C	316-697C	Medium
Light Grit	276-697PS	316-697PS	Moderate
Fine Grit	276-697F	316-697F	Light
Nylon	276-697N	316-697N	Light
Tampico	276-697T	316-697T	Light

- 38 - FC-GTR-OP-EN

#### **SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:**

SQUEEGEE SIZE	30" DISK DECKS	34" DISK DECKS	29" CYL. DECKS	33" CYL. DECKS
33" Squeegee	Standard	Optional	Standard	Optional
36" Squeegee	Optional	Standard	Optional	Standard
39" Squeegee	Optional	Optional	Optional	Optional

SQUEEGEE SIZE	LINATEX BLADE KIT	GUM RUBBER BLADE KIT	URETHANE BLADE KIT	COMPLETE SQUEEGEE ASSEMBLIES
33" Squeegee	33-770L	33-770G	33-770U	33-7180
36" Squeegee	36-770L	36-770G	36-770U	36-7180
39" Squeegee	39-770L	39-770G	39-770U	39-7180

SQUEEGEE MATERIAL:	USED FOR:	
LINATEX	Provides best wear and tear resistance. Not designed for use with harsh chemicals.	
URETHANE	Provides best resistance when dealing with harsh chemicals, oils, fuels, etc.	
GUM  Provides best drying performance on rough/g floor types by sealing over irregularities. Show		

# **NOTICE**

Squeegee blade kits include (1) Rear Blade & (1) Front Blade.

# **NOTICE**

Squeegee Assemblies (complete) listed above all come with Linatex blades.



FC-GTR-OP-EN - 39 -

# **P&G CONTROLLER COMMON ERROR CODES**

Below are common diagnostic codes and some typical causes / remedies. If the information provided in the "Correction" section does not cure the code, seek technical support from your local authorized RPS Corporation distributor.

Diagnostic Code	Cause	Correction
1501	Parking brake is released or the parking brake coil	Check to assure the parking brake is not manually
	circuit is open	released.
1507	Parking Brake Over Current	Parking brake coil is internally shorted or there is a
		problem with the wiring to the brake.
2C00-2C02	Battery voltage is low	Charge the batteries with OEM supplied charger.
2F01	Throttle is depressed during power on or a fault with	Turn the machine off, assure that the throttle
	the throttle system	button(s) or throttle pedal are not depressed. Turn
		the machine back on and if the condition persists,
		seek technical support from your local authorized
		RPS distributor
3101	Brush / Vac Motor - Precharge Fault	This code can be caused by the scrub or vacuum
		motor(s) having moisture present or contaminated
		with debris.
3102	Traction Motor - Precharge Fault	This code can be caused by the traction motor
7600	Durch Mateu Cinevit Onen	having moisture present or being contaminated.
7600	Brush Motor Circuit Open	The controller is not seeing continuity on the brush
		motor circuit. This can be caused by the wiring to
		the scrub brush motor(s), corroded connections or a
7601-7603	Brush Motor Circuit Over Current	faulty motor. The brush motor output is exceeding its limit. With
7001-7003	Brush Motor Circuit Over Current	the scrubber turned off, check for entrapped debris
		around the brush driver(s) and assure the brushes
		turn freely.
7700	Vacuum Motor Circuit Open	The controller is not seeing continuity on the
		vacuum motor circuit. This can be caused by the
		wiring to the scrub brush motor(s), corroded
		connections or a faulty motor.
7701-7703	Vacuum Motor Circuit Over Current	The vacuum motor output is exceeding its limit. This
		can be caused by a faulty vacuum motor(s) or
		damaged vacuum motor wiring.
1E03	Charger / Seat Switch – Charger is plugged in or	On board charger is plugged into the wall outlet. Off
	operator is not on the seat of ride on equipment.	board charger is plugged into charging port. The
		switch at the charger plug for an external charger is
		out of adjustment. (Operator is not present on seat
		GTR and EX machines Prior to Serial Number 100xxx)
7500	LCD Communication Error	The LCD lost communication to the controller. Check
		the 6 wire harness between the LCD module and it's
		connections.
7801-7802	Traction Motor Over Current	The traction motor output is exceeding its limit.
		Check to assure the parking brake is releasing when
		the throttle is engaged. Assure all wheels that
		contact the floor turn freely.
7804	Boost Mode	The code 7804 indicate the controller is in Boost
		Mode and considered normal under hard
		acceleration or when climbing a hill.
7900	Emergency Stop Activated	The emergency stop is activated. If the machine is
		not equipped with an emergency stop switch
		typically the LCD module has failed.

**- 40 -** FC-GTR-OP-EN





1711 South Street Racine, WI 53404 www.factorycat.com Tel. US: 800-634-4060